


MOSQUITO NET

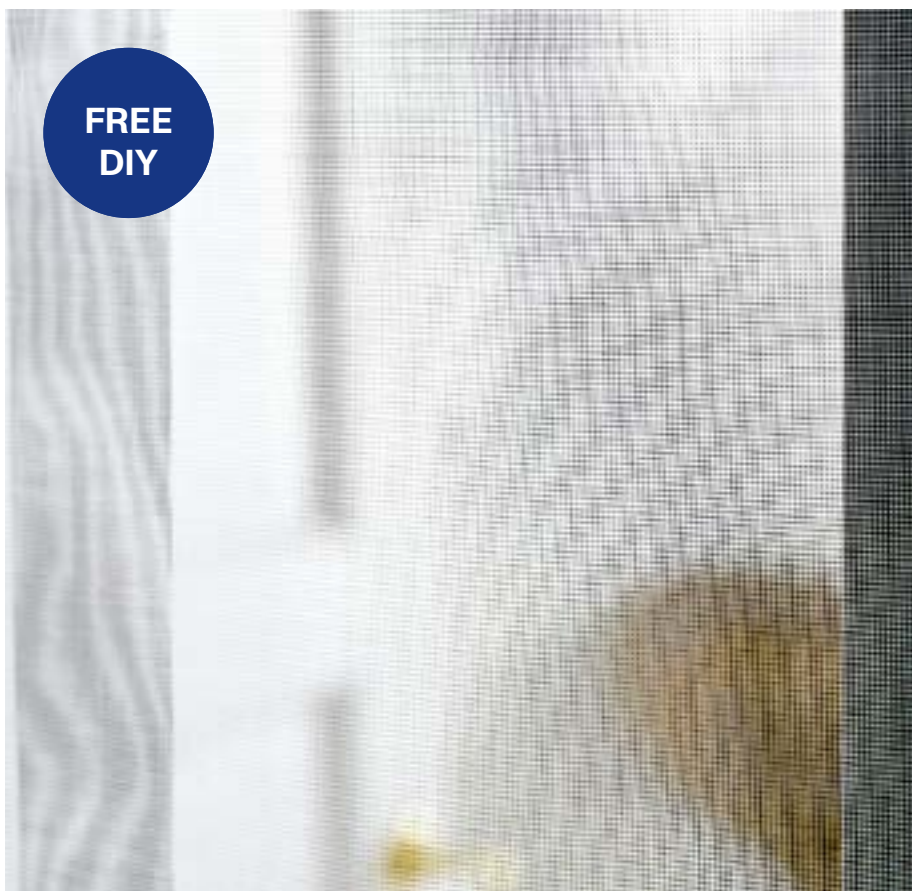

FREE
DIY



MATERIALS

- Mosquito net
- Self-adhesive hook and loop tape (no. 30343 or 30301)
- Zinc ribbon

INSTRUCTIONS:

1. Begin by measuring the door the mosquito net is intended for:
E.g. Width of door opening 90 cm (A), height of door opening 210 cm (B).

2. Cut 3 lengths of mosquito net, $\frac{1}{3}$ of door width + 10 cm x door height + seam allowance at top and bottom
E.g. Width: 30 cm + 10 cm = 40 cm, height: 210 cm + 1 cm seam at bottom + 2 cm for hook and loop tape = 213 cm

3. Stitch a 1 cm casing at the bottom of the lengths with zinc ribbon between.

4. Place the lengths 10 cm on top of one another at top (C) and stitch across.

5. Stitch the soft part of the hook and loop tape onto the mosquito net (D).

6. Place the self-adhesive part (hard part) of the hook and loop tape on the door frame and place the mosquito net.

